
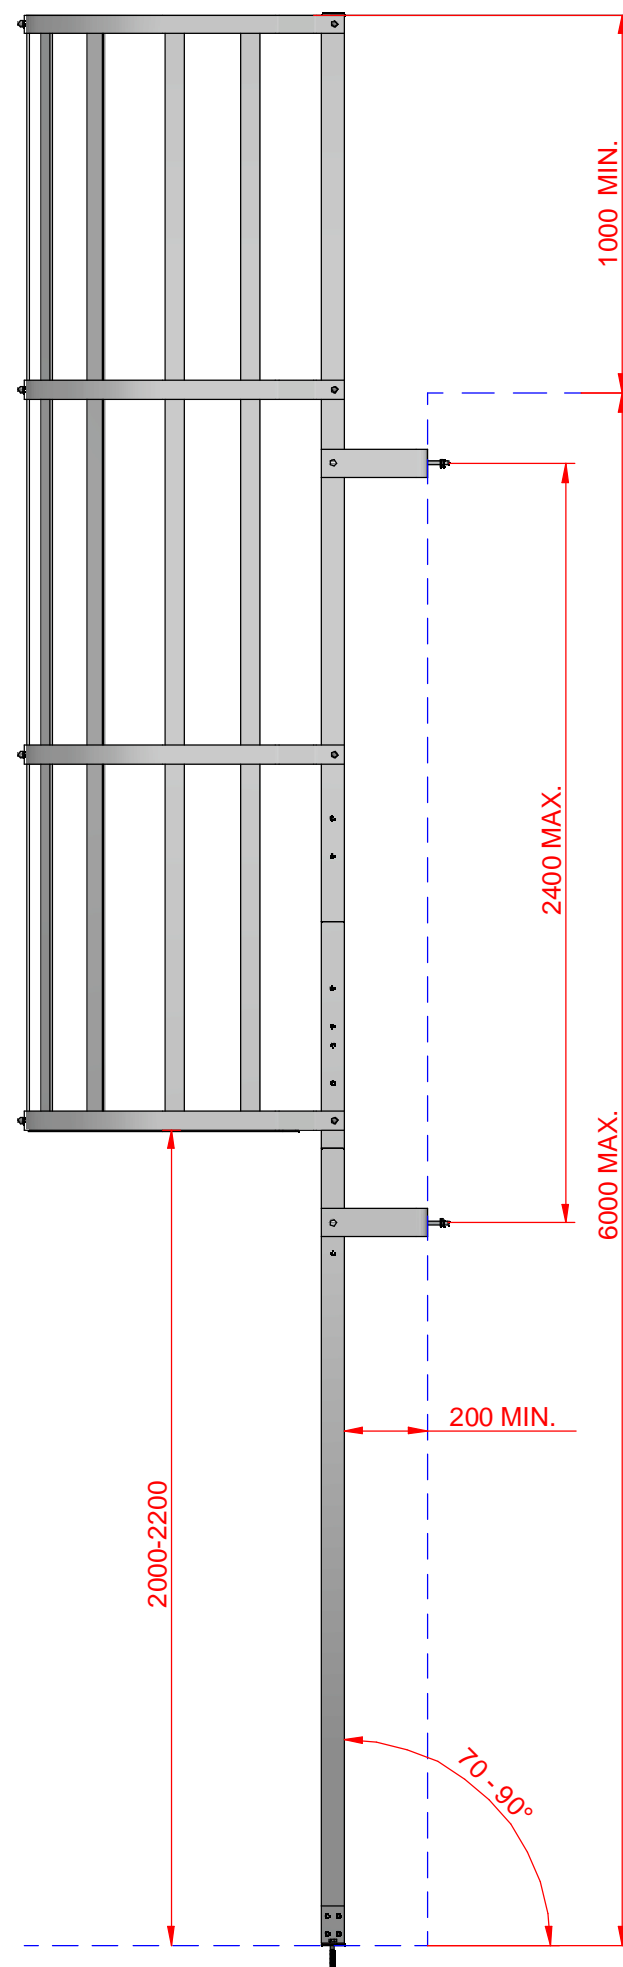


**TYPICAL FIXINGS**  
 TIMBER: M10 x 100mm Coach Screw  
 CONCRETE: M10 x 75mm Screw Bolt  
 STEEL: M10 Stainless Steel Hex Nut

**ISOLATING RUBBER MAY BE REQUIRED BETWEEN LADDER AND ADJACENT SURFACES**




**LD439 Ladder Cage  
 REQUIRED WHEN IT IS POSSIBLE  
 TO FALL MORE THAN SIX METERS**

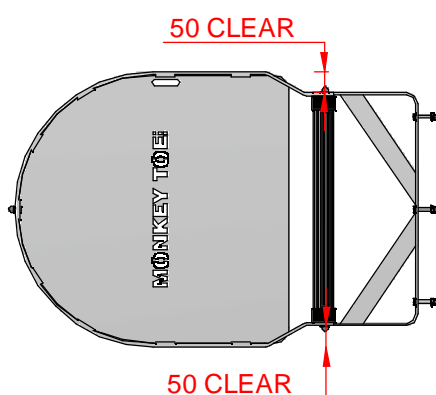

**TYPICAL LADDER ASSEMBLY**  
 1:20

**PLAN VIEW**  
 1:20

**CRITICAL DIMENSIONS**  
 1:20

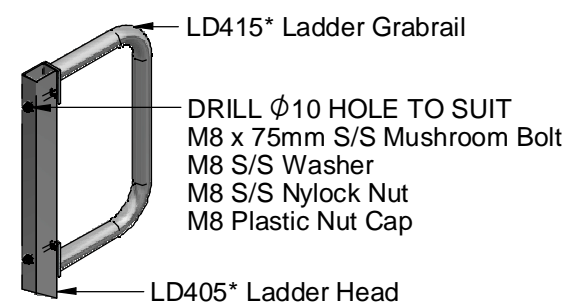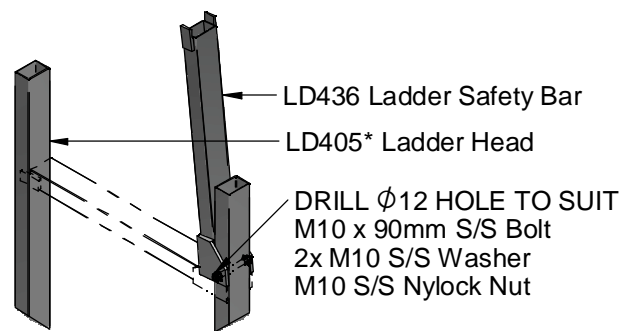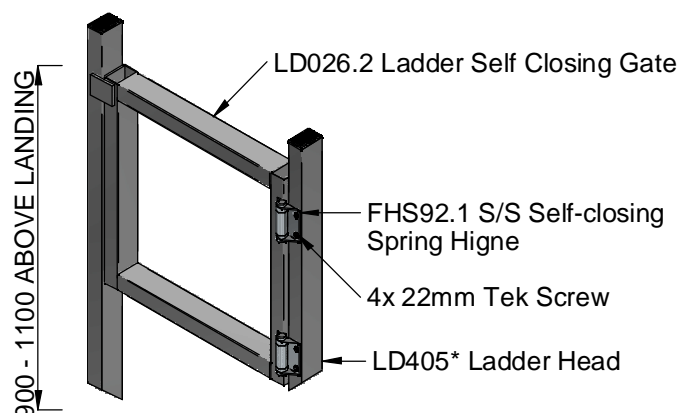


**LADDER GATE**  
 1:15

**LADDER SAFETY BAR**  
 1:15


**LADDER GRAB RAILS**  
 1:15




**EVERYTHING BETTER**  
 0800 658 637 - www.monkeytoe.co.nz

Ladder Install Guide		
MONKEYTOE GROUP		
DWG No: 2004-LAD-I-01	23/06/2019	
 DO NOT SCALE	SHEET 1 OF 2	A3
	SCALE: 1:50	REV:01
DIMENSIONS IN MILLIMETERS		


This drawing and associated design is the copyright and property of Monkeytoe Ltd. It shall not be used for any purpose or project, without prior written consent other than that designated by Monkeytoe Ltd.©

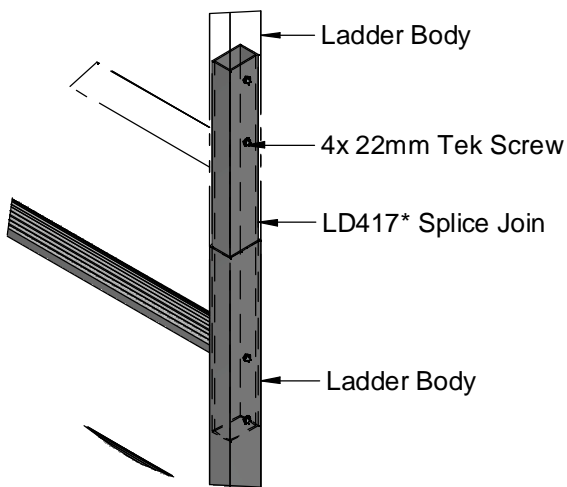


**LADDER SPLICE JOIN**  
1:10

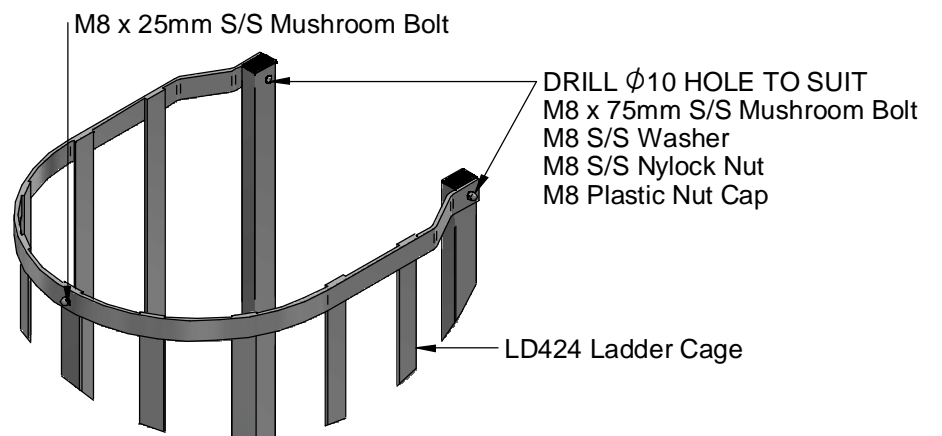


**LADDER CAGE**  
1:15

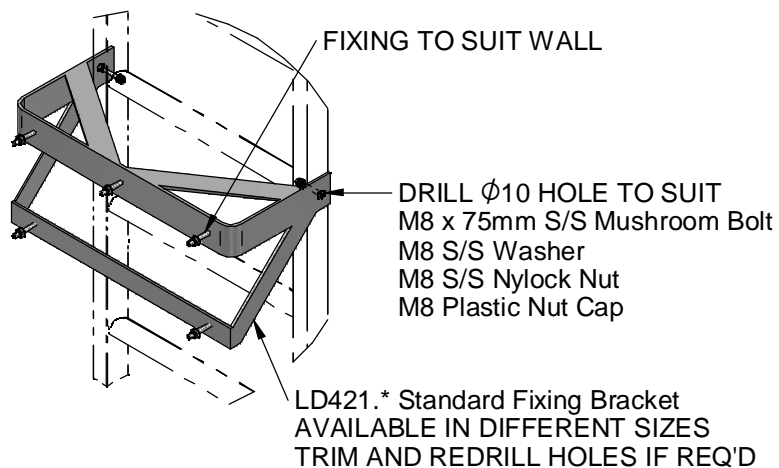


**STANDARD FIXING BRACKET**  
1:15

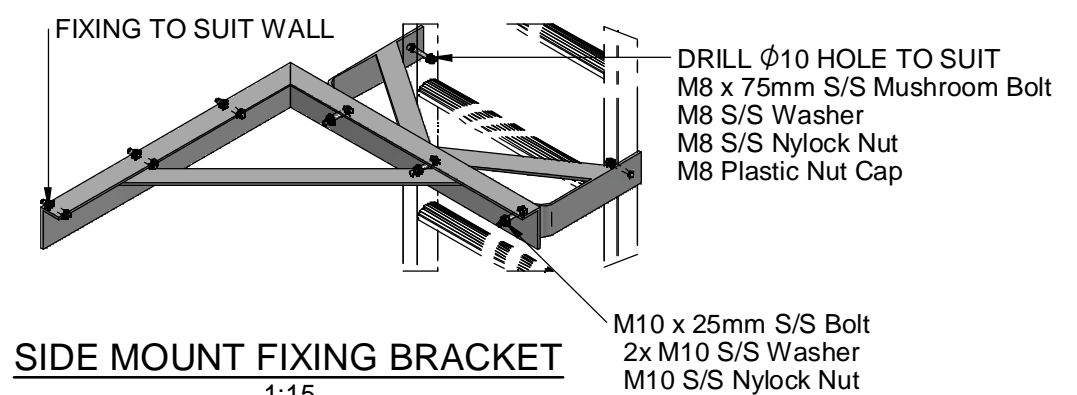


**SIDE MOUNT FIXING BRACKET**  
1:15

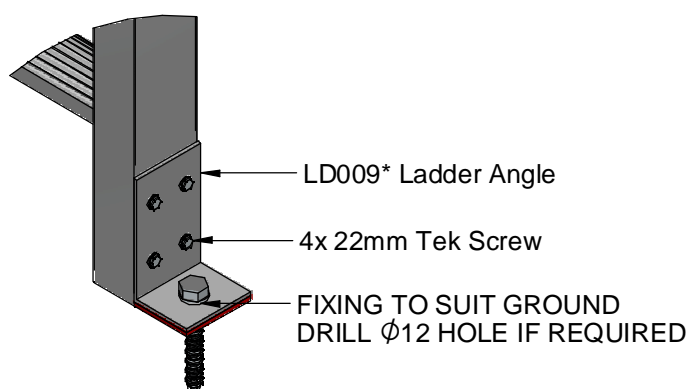


**LADDER FOOT**  
1:5

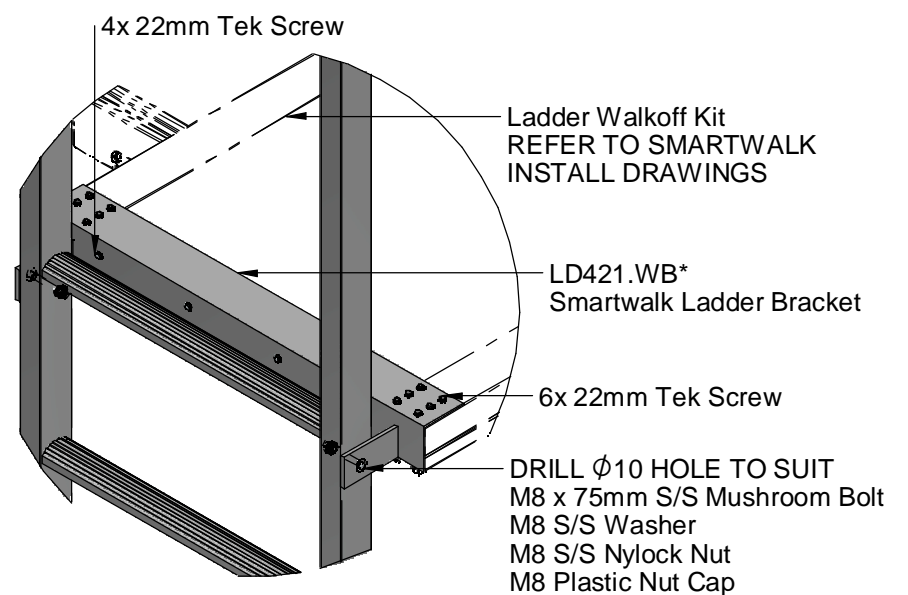

**LADDER WALKOFF KIT**  
1:10

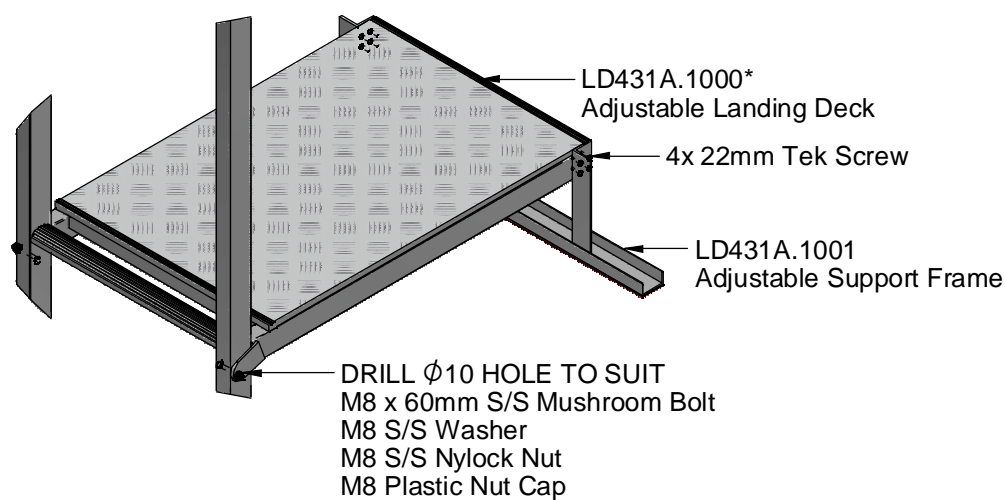


**ADJUSTABLE LANDING KIT**  
1:15

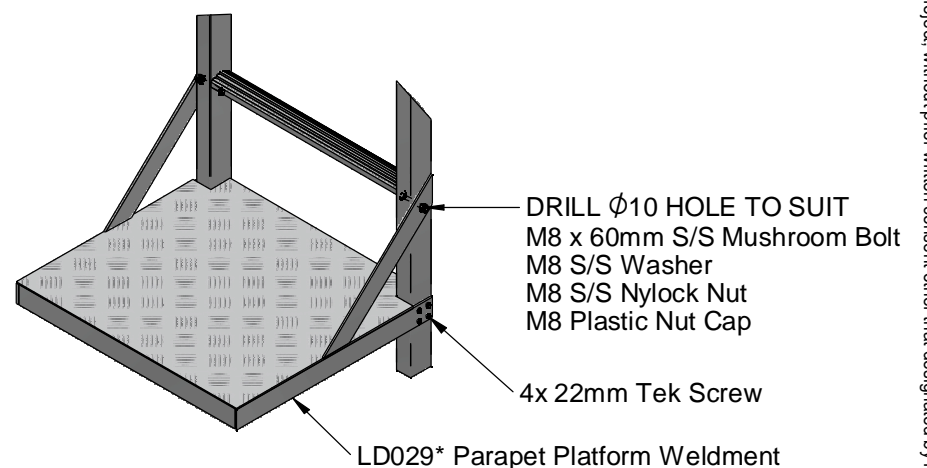

**PARAPET PLATFORM**  
1:15

**Monkeytoe**

EVERYTHING BETTER  
0800 658 637 - www.monkeytoe.co.nz

Ladder Install Guide		
MONKEYTOE GROUP		
DWG No: 2004-LAD-I-01	23/06/2019	
 DO NOT SCALE	SHEET 2 OF 2	A3
	SCALE: 1:10	REV:01
DIMENSIONS IN MILLIMETERS		